

335D ATM Intake Kit Install Instructions

- 1) Remove center ducting, and stock airbox from vehicle. Remove rubber bushing off of the stud on the frame rail
- 2) Remove MAF sensor from stock airbox
- 3) Insert MAF into airbox as shown



- 4) "Rotate" MAF through seal while pulling side out of the way as shown




- 5) Loosely place new Intake Kit in place
- 6) Plug in MAF sensor connector, then connect intake hose to MAF
- 7) Route single connector and main harness into cutout of Intake Kit as pictured



- 8) Start nut (supplied) onto threaded frame rail stud on the bottom bracket of the Intake Kit, leave loose

- 9) Slide in air filter by moving entire Intake Kit to make room. Place the inverted end of the cone filter over the bracket (circled), then the flanged end of the filter can be rotated in over the MAF. Move/tuck wiring harness against corner of engine bay as pictured if necessary

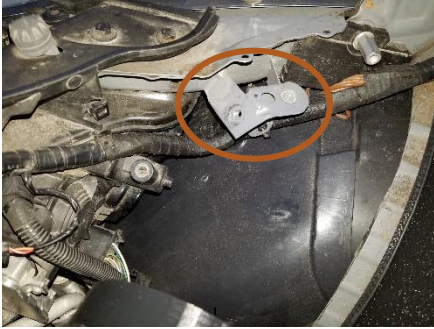

- 10) Tighten air filter and MAF clamp connections
- 11) Use washers (provided) and OEM bolt to space and fasten top bracket as needed. Washers must be used so the bolt does not bottom out. Tighten top bolt and bottom nut
- 12) Insert OEM duct into Intake Kit then center duct and work the two ducts together until they're inserted. Tighten 3 duct screws



- 13) Replace Intake Kit lid and tighten (do not over-tighten or it may crack)
- 14) Enjoy!