




INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-36447

MAKE: Audi
MODEL: Q5
YEAR: 2017-2022
ENGINE: L4-2.0L(t)

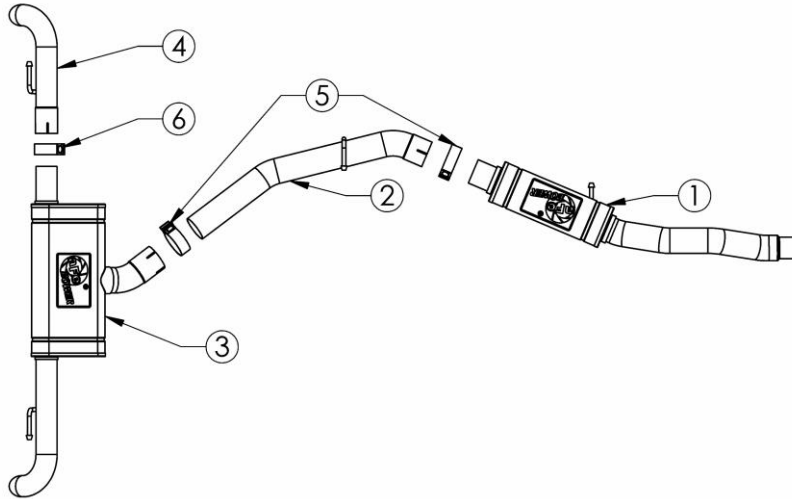

| Item | Description | Part Number | Quantity |
|------|---------------------------|-------------|----------|
| 1 | S/A Front Pipe | 05-245269 | 1 |
| 2 | S/A Mid-Pipe | 05-245270 | 2 |
| 3 | S/A Muffler Assembly | 05-245271 | 1 |
| 4 | S/A Driver Side Tail Pipe | 05-245272 | 1 |
| 5 | Clamp, Band: 3" | 05-41055 | 2 |
| 6 | Clamp, Band: 2-1/2" | 05-41061 | 1 |

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.

Install V-band clamps with anti-seize lubricant and hand tighten only to torque specifications of 10-15 ft-lb.





INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

MAKE: Audi
MODEL: Q5
YEAR: 2017-2022
ENGINE: L4-2.0L(t)

49-36447

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Loosen the (x2) nuts on the sleeve clamp and slide the sleeve clamp towards the front of the car.
6. Remove the (x2) bolts on the passenger and driver side, rear muffler hanger mounting brackets. Retain Bolts, they will be reused.
7. Remove the O.E. Exhaust from the sleeve clamp back.
8. With the O.E. exhaust on the ground remove the hangers from the rubber mount isolators, install rear muffler hanger mounting brackets onto aFe Power Muffler Assembly Hanger and aFe Power Driver Side Tail Pipe Hanger.
9. Install the aFe Power Front Pipe using the O.E. Sleeve Clamp. Slide Hanger into O.E. Rubber Mount Isolator.
10. Slide aFe Power Mid-Pipe into aFe Power Front Pipe. Secure with provided 3" Band Clamp. Slide Hanger into O.E. Rubber Mount Isolator.
11. Slide aFe Power Muffler Assembly into aFe Power Mid-Pipe. Secure with provided 3" Band Clamp.
Reinstall the Rear Muffler Hanger Brackets in the car using O.E. Bolts (Torque to 20Nm or 15 ft-lbs).
12. Slide aFe Driver Side Tailpipe into aFe Power Muffler Assembly. Secure with provided 2.5" Band Clamp.
Reinstall the Rear Muffler Hanger Brackets in the car using O.E. Bolts (Torque to 20Nm or 15 ft-lbs).
13. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
14. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
15. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
16. Remove vehicle from jacks stands.
17. It is recommended to re-tighten all clamps and hardware after 50-100 miles.