



## INSTALLATION GUIDE

CTS Turbo Mercedes-Benz W213/W205 C43/E43 AMG M276  
Downpipes/High-Flow CATS



## WHAT IS INCLUDED

1. CTS Turbo Downpipes./High-Flow CATS
2. Ring Gasket




## NOTES

Vehicle used in this guide is a 2017 Mercedes Benz C43 AMG.

Always make sure the car is safe to work on. Do not work on a hot motor.

## STEP 1

Remove the intake system.

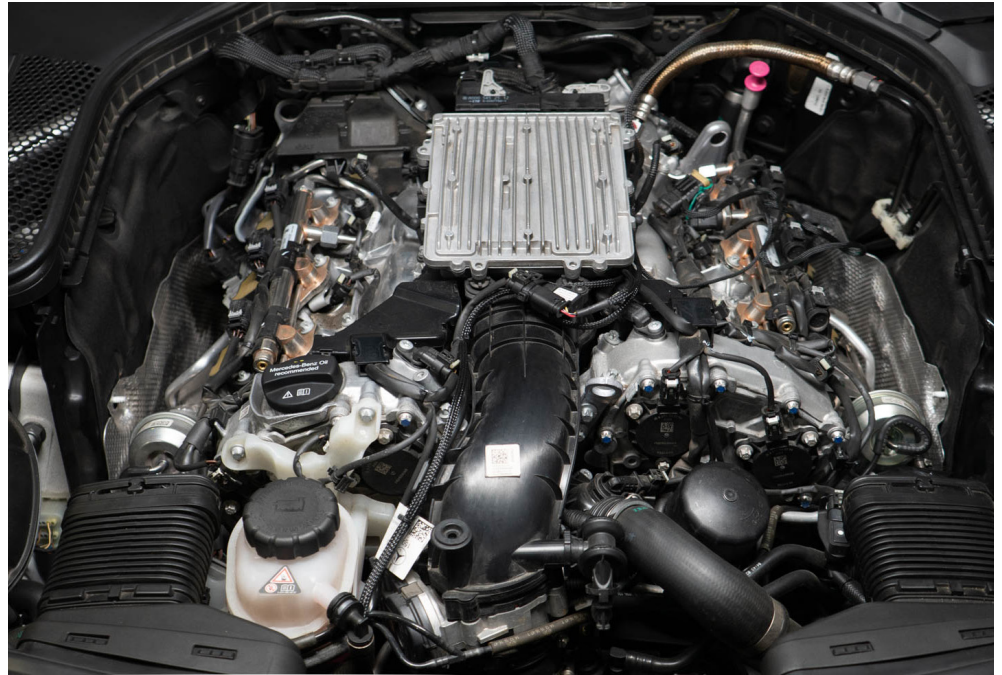

## STEP 2

Make sure to disconnect O2 electrical connectors from both sides of the vehicle




**STEP 3**

Remove the belly tray.

**STEP 4**

Remove the bolts from the support brackets securing the mid pipes.

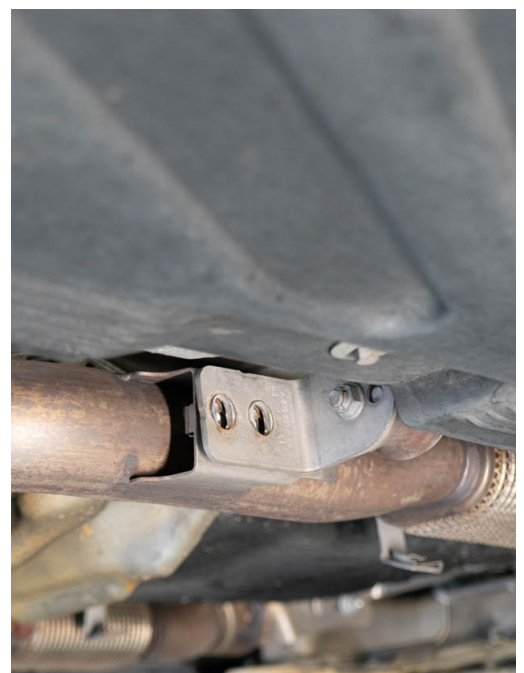

## STEP 5

Remove the clamp securing the mid pipe to the downpipe.

Repeat for both sides.



## STEP 6



Remove the nuts from the downpipe bracket.



## STEP 7

There are 2 bolts securing each downpipe that need to be removed.

Using a long extension will help get to the bolts.

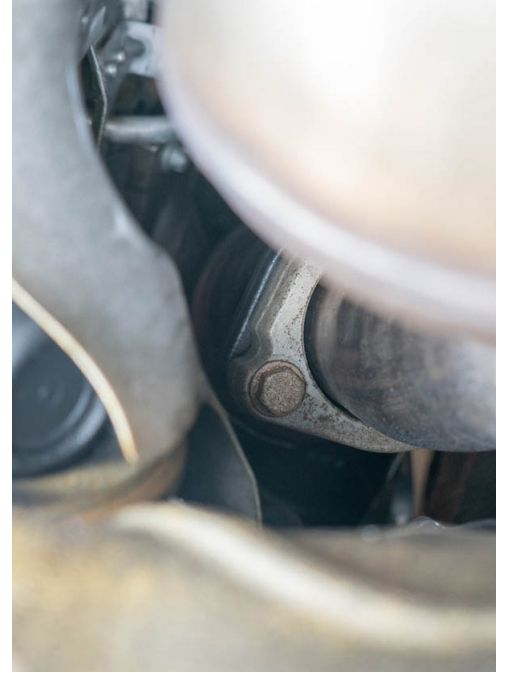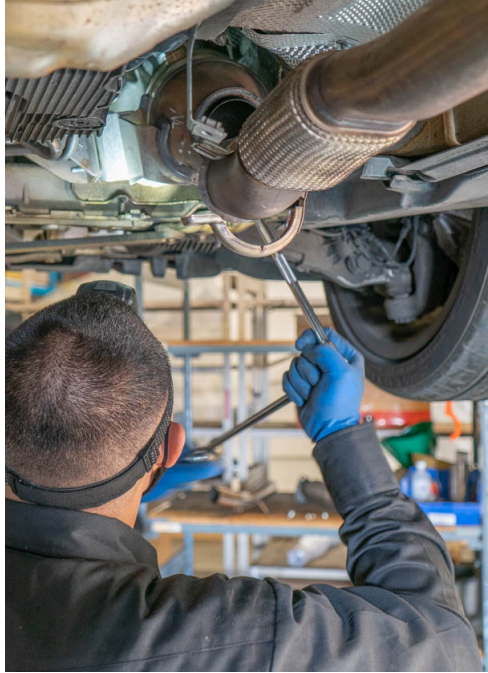


**STEP 8**


Transfer the O2 sensors.

**STEP 9**

Install CTS downpipes/High-Flow CATS.

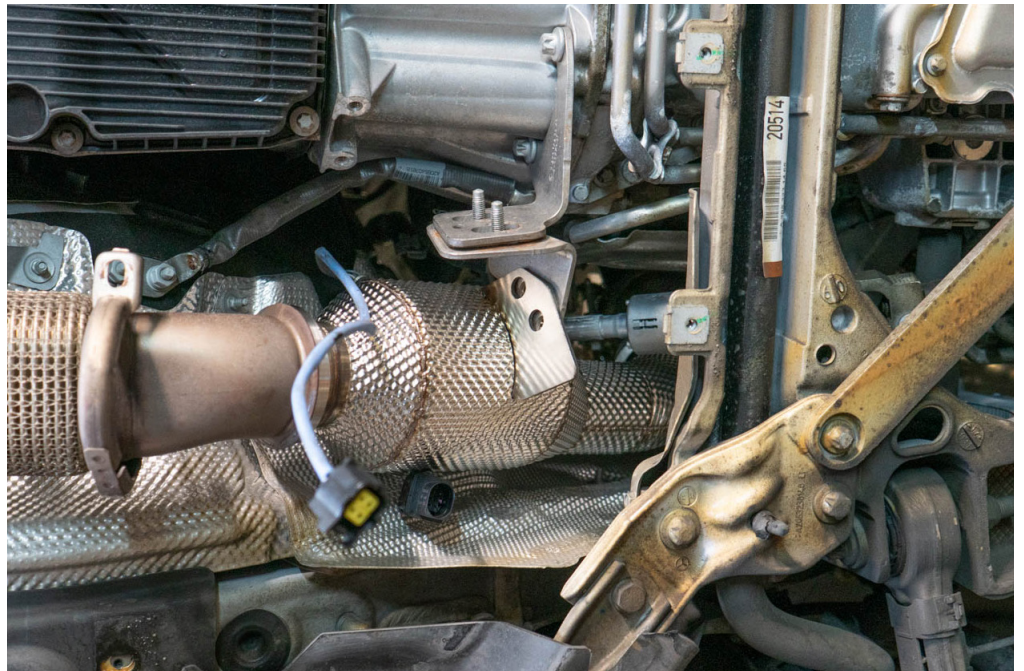

## STEP 9 Continued

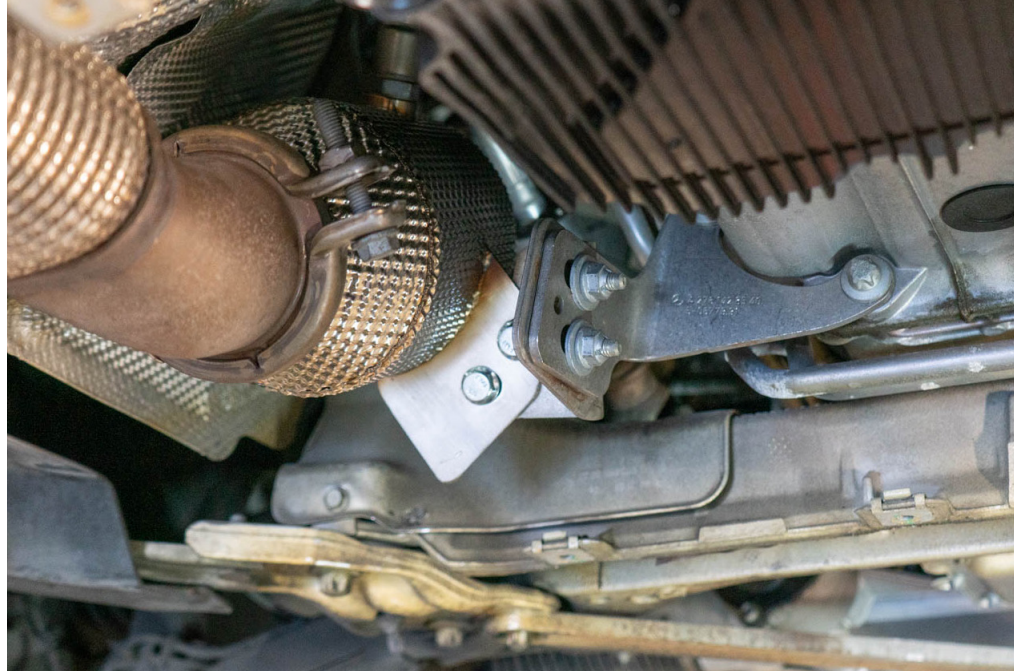

## STEP 9

Once the downpipes are installed you can reassemble back from STEP 4.

Enjoy more sound and power!.

