





INSTALLATION GUIDE

AUDI B9 S4/S5 STRUT BRACE
CTS-HW-504

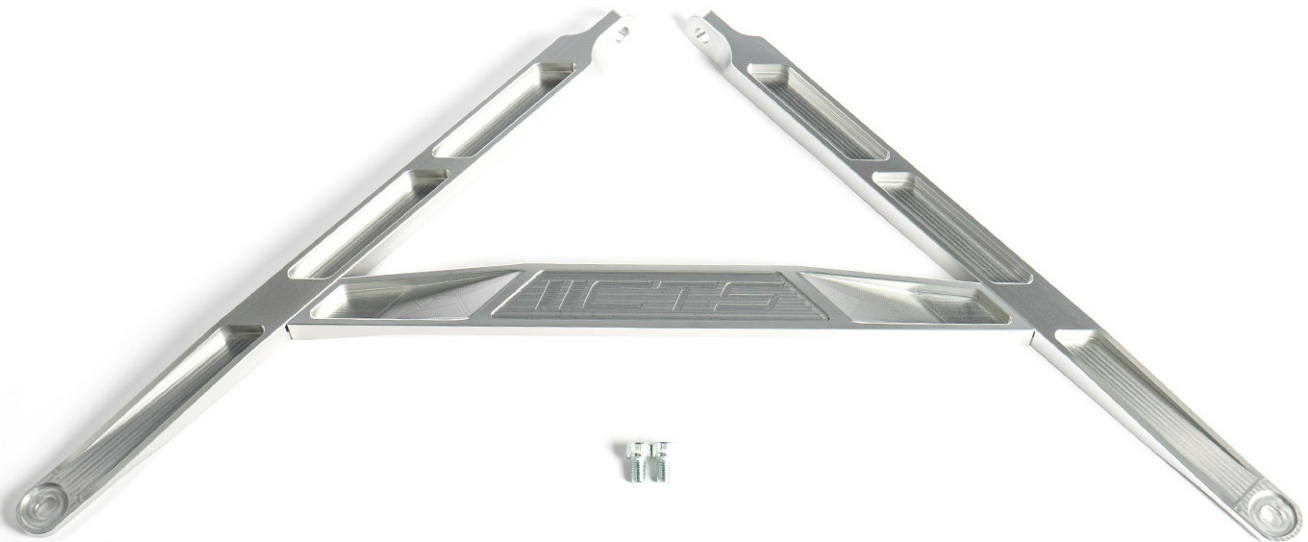

WHAT IS INCLUDED

1. Strut Brace
2. Hardware

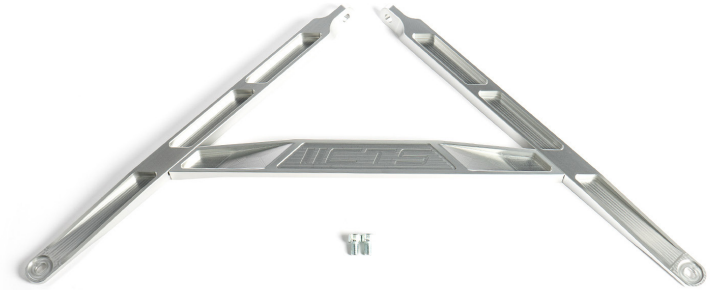

NOTES

Vehicle used in this guide is a 2018 Audi S4.

Always make sure the car is safe to work on. Do not work on a hot motor.


STEP 1

Remove the rubber rain-tray seal.



STEP 2

Lift the rain tray and remove the nuts securing the OEM brace.

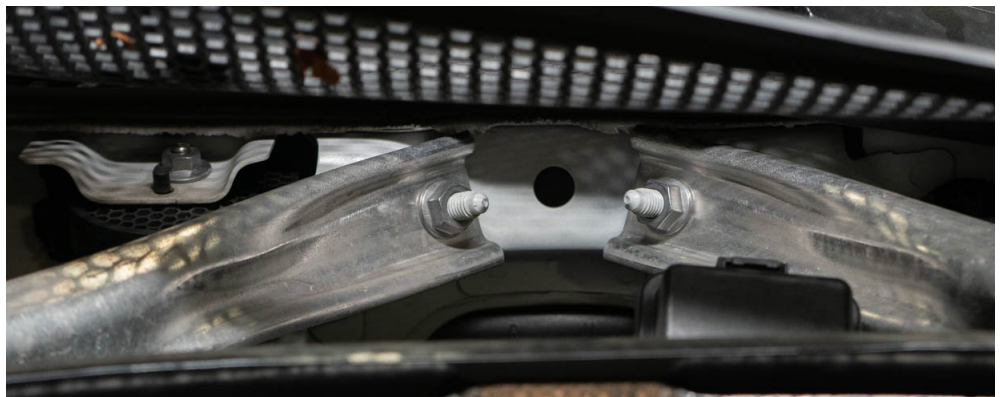


STEP 3

Remove the bolts at the strut tower.



STEP 4

You can now remove the OEM braces.

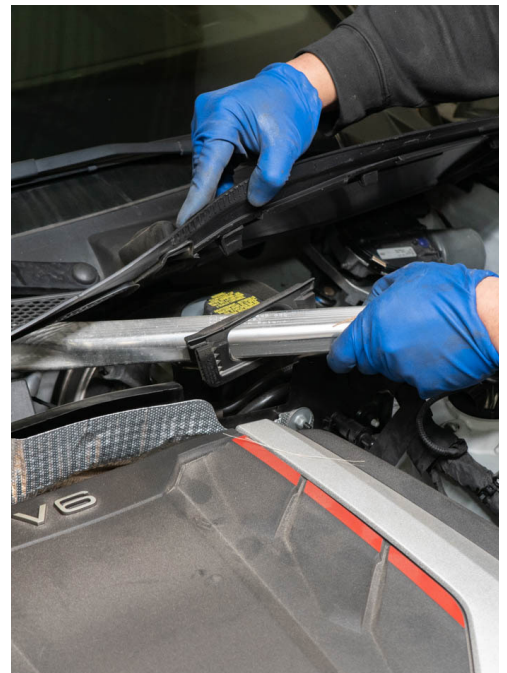

STEP 5

Transfer the plastic covers to the CTS braces.



STEP 6

Install the passenger side brace.



STEP 7

You will need to insert the center brace before installing the drivers side brace.



STEP 8

Loosely tighten the nuts under the rain tray.



STEP 9

Install the provided bolts to secure the center brace.



STEP 10

Reinstall the OEM bolts for each brace.



STEP 11

Reinstall the rubber seal and you are done!

