



## INSTALLATION GUIDE

CTS Turbo Mercedes-Benz C63/S Intake System  
CTS-IT-952



## WHAT IS INCLUDED

1. High-Flow air filters
2. CTS air boxes
3. CTS inlet pipes
4. Hardware




## NOTES

Always make sure the car is safe to work on. Do not work on a hot motor.

## STEP 1

Disconnect the electrical connector from the sensor.

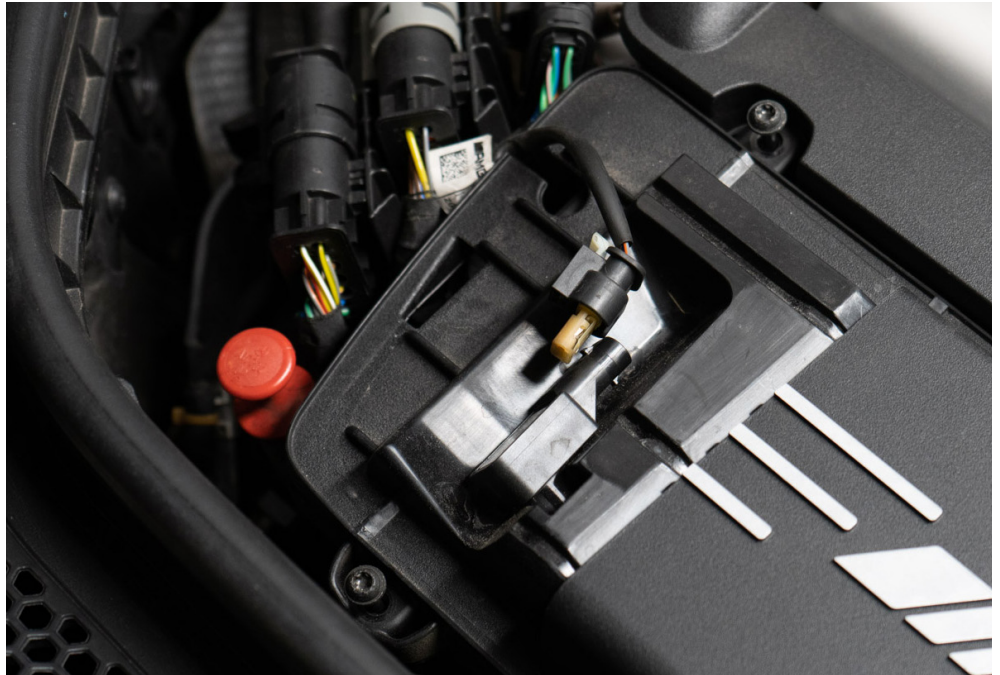


## STEP 2

Loosen the clamp on the turbo inlet side.



**STEP 3**

Loosen the torx screws indicated.

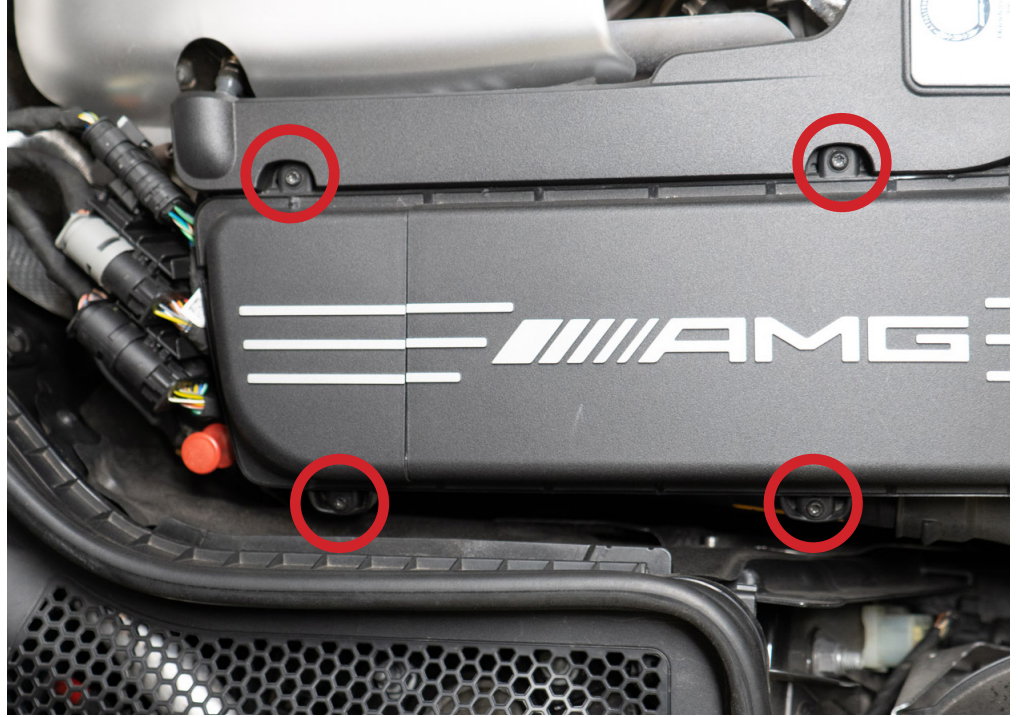**STEP 4**

Remove the vacuum hose connected to the air box.



## STEP 5

Lift and remove the top lid of the airbox.



## STEP 6

Remove the panel filter and airbox.



## STEP 7

Transfer the sensor to the CTS airbox.

To remove the sensor from the OEM air box rotate 90 degrees to remove.



## STEP 8

Install the CTS airbox.



**STEP 9**

Install the CTS Air filter and intake pipe.

**STEP 10**

Reinstall the vacuum line.



## STEP 11

Reconnect the electrical connector.



## STEP 12

Repeat for the other side and you are done!

