



INSTALLATION GUIDE

CTS Turbo Mercedes-Benz E63/S Intake System
CTS-IT-951



WHAT IS INCLUDED

1. CTS High-Flow air filters
2. CTS Airboxes
3. CTS Intake pipes
4. Hardware



NOTES

STEP 1


Remove the engine cover.



STEP 2

Remove the electrical connectors indicated.

Disconnect the vacuum hose.

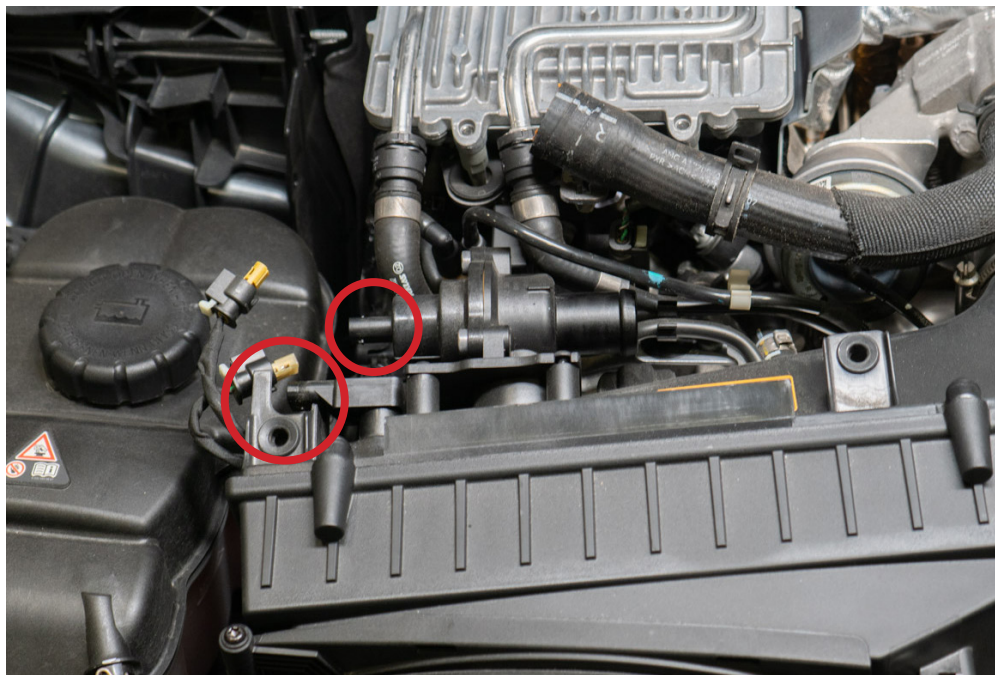


STEP 3

Loosen the clamp indicated by the arrow.

**STEP 4**

Lift and remove the OEM intake.

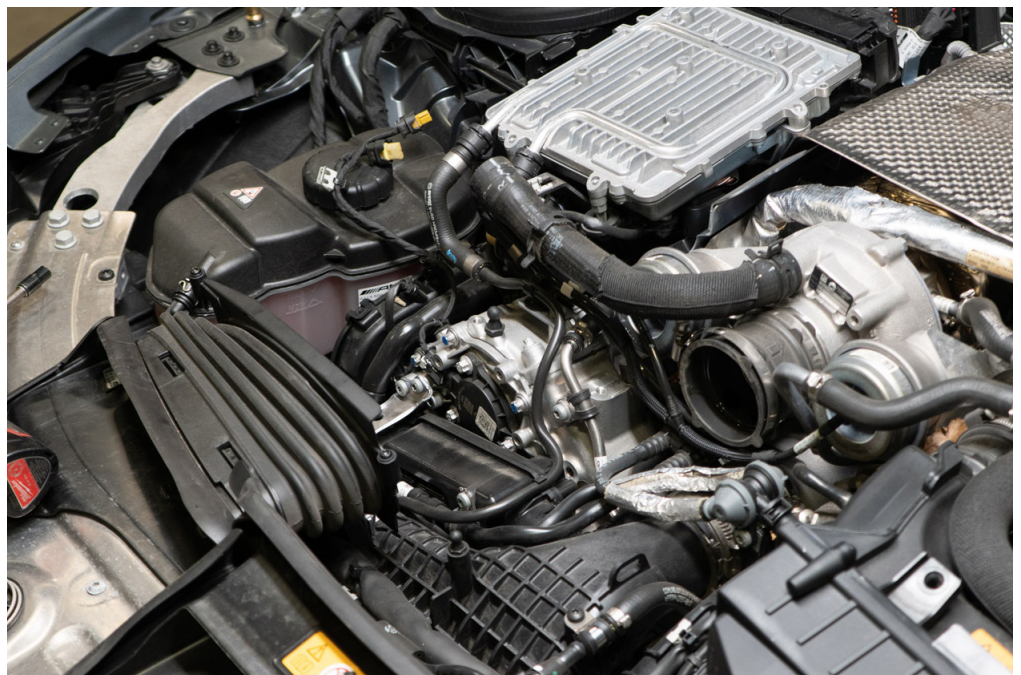

STEP 5

Repeat for the other side.





STEP 6

Transfer the sensors to the CTS airboxes.




STEP 7

Transfer the OEM grommet to the CTS airboxes

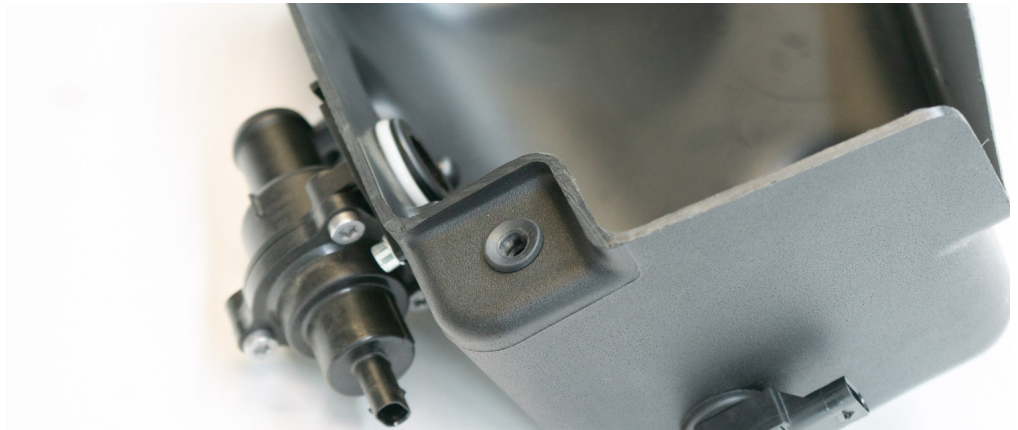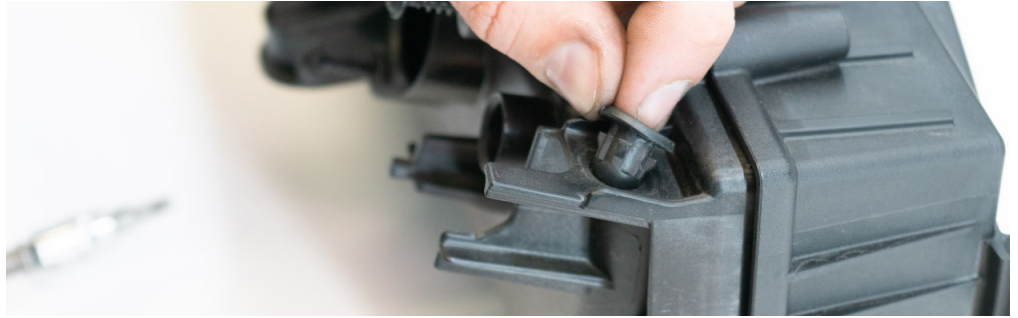**STEP 8**

Remove the mounting post.

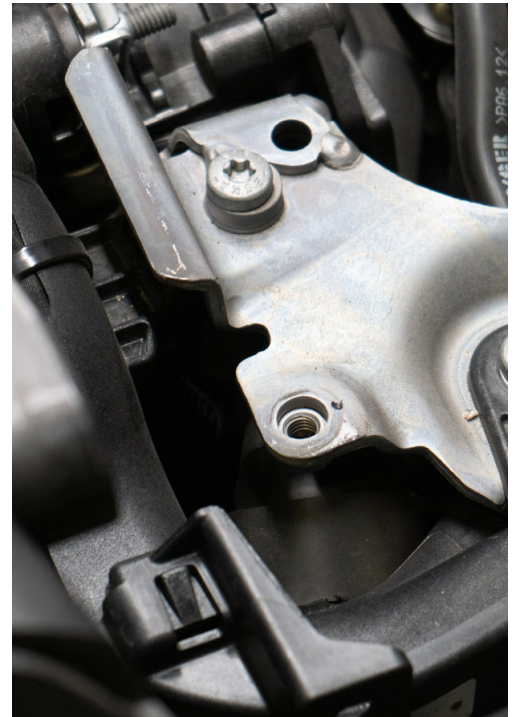

STEP 9

Install the CTS airbox and secure with provided bolt into the mounting point



STEP 10

The two intake pipes are different. The longer one is for the passenger side of the vehicle.



STEP 11

Install the intake pipe and air filter.


**STEP 12**

Ensure to tighten the clamp at the turbo inlet.




STEP 13

Reconnect the vacuum hose.

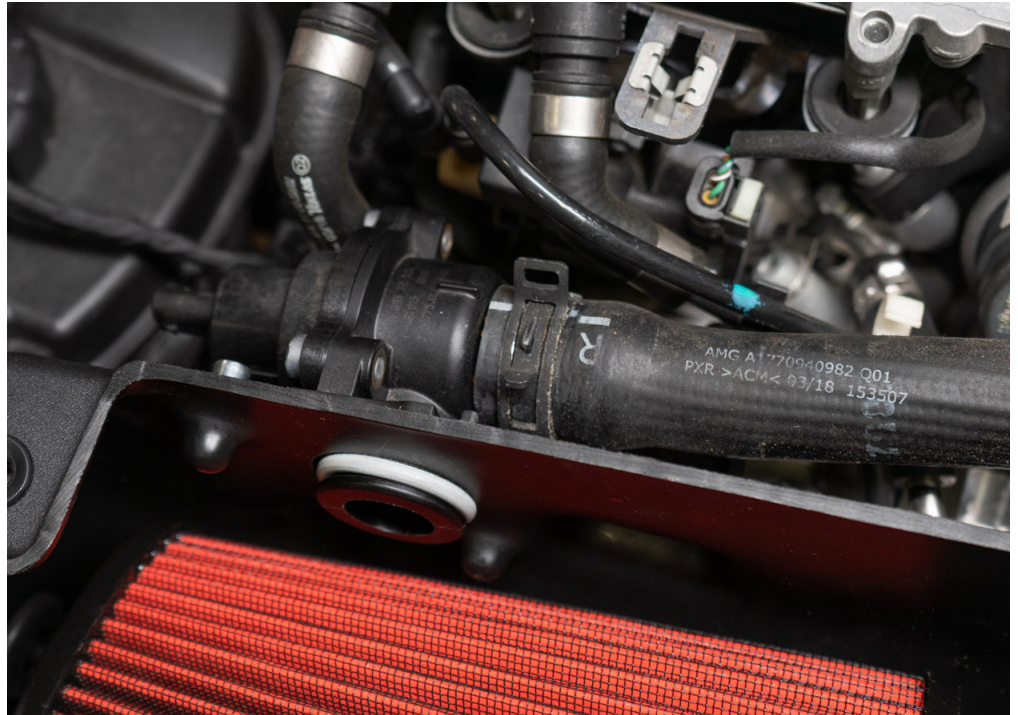**STEP 14**


Reconnect the electrical connectors.

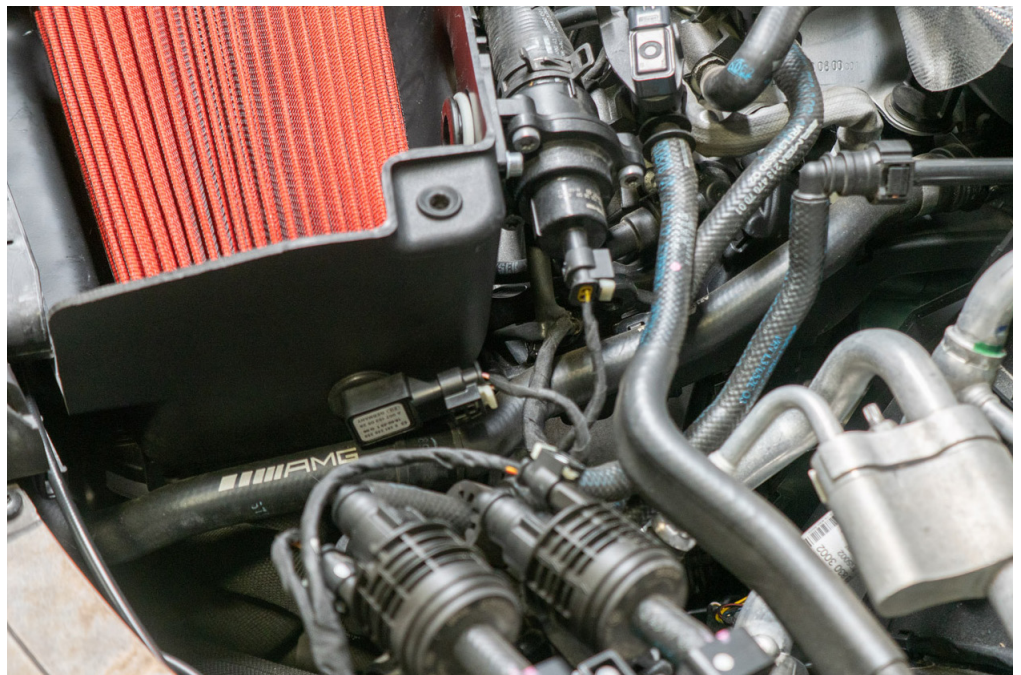

STEP 15

Check your connections on both sides and you are done!

You can run the intake with or without the engine cover.

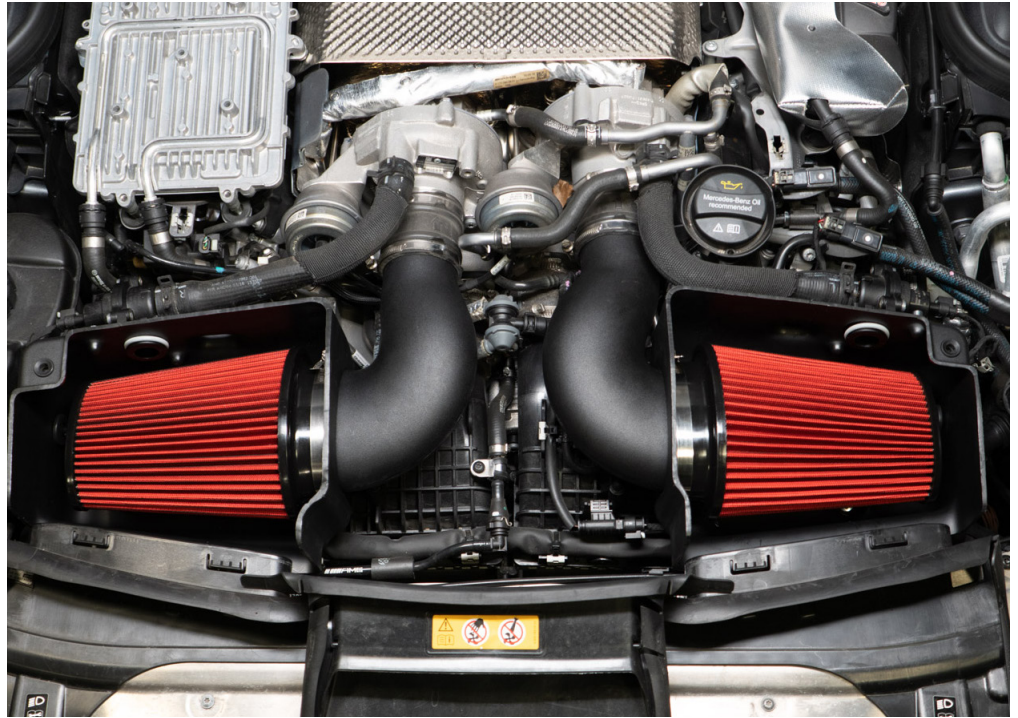

YOU ARE DONE!

