



INSTALLATION GUIDE

CTS TURBO STRUT BRACE FOR A90 SUPRA AND G20 BMW
CTS-SUS-3001/CTS-SUS-3002



WHAT IS INCLUDED

1. CTS strut braces
2. Hardware

NOTES

Vehicle used in this guide is a 2020 Toyota Supra. Other cars will follow the same steps.

Always make sure the car is safe to work on. Do not work on a hot motor.


STEP 1

Depending on your vehicle they may have factory braces. Remove factory braces.



STEP 2

Install the shorter bolt at the front of the vehicle. Please not washer order.

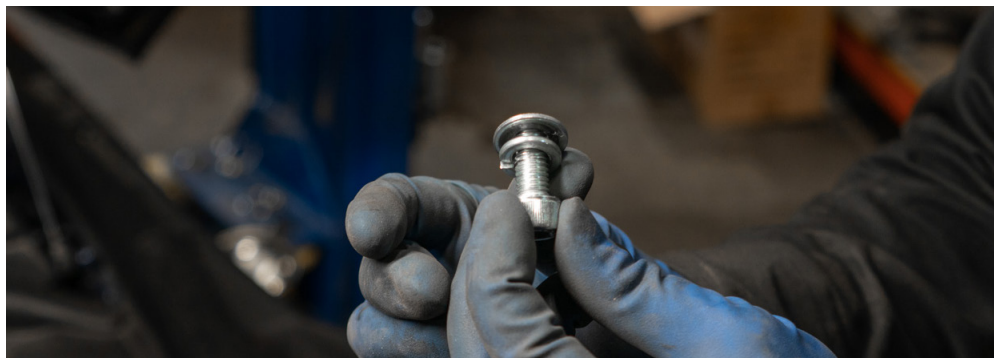

STEP 3

Install the bolt, washers and nut on the strut tower. You need access from the wheel well in order to tighten the nut.

Repeat for the other side and you are done!

