



Installation Instructions For

2015+ Audi S4/S5 B9 2.9T

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Silicone Tube	1
2	Heat Shield	1
3	Heat Shield Cover	1
4	Air Filter 115/89mm	1
5	M4 Bolt 10mm kit	3
6	89-83 ALU Tube	1
7	M6 Bolt	2
8	M6 Washer	2
9	M6 Spring Washer	2
10	Heat Shield Mount	2

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory. Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

***All installation of parts must be performed by a trained professional.**





Figure 1: Loosen the hose clamp and remove the air box.



Figure 4: Install the heat shield.



Figure 2: Remove the rubber from the stock air box and install the ALU mount on rubber.



Figure 5: Secure with bolt.



Figure 3: Install the ALU mount and rubber.



Figure 6: Install the MST silicone hose.

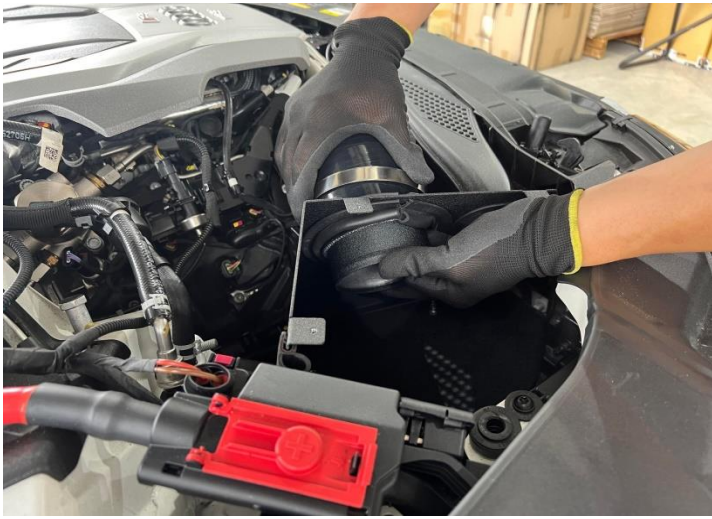


Figure 7: Install the MST tube.

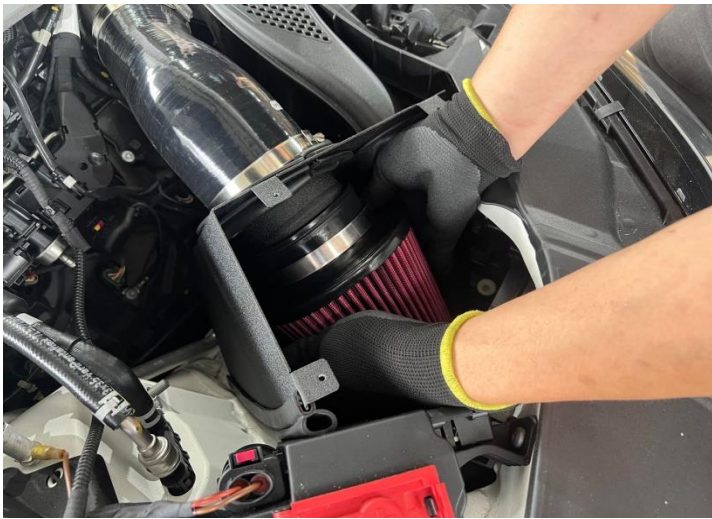


Figure 8: Install the air filter.



Figure 9: Install the heat shield cover and secure with bolt.



Figure 10: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

